Installation Instructions

for the Unit Mounted X-Ray Viewer

PROCEDURE:

1. Remove the support arm end cap and slide the support arm cover out.
2. Remove the plug from the support arm and install the x-ray view box assembly on the support arm, using the flat washer and screw provided. Replace the support arm end cap and cover.
3. Remove the flex arm end cap and slide the flex arm upper cover off.
4. Insert the power cord in the groove along the length of the flex arm lower cover and reassemble the flex arm covers

NOTE ▶ **NOTE: Take care to leave enough slack in the power cord to allow the unit arms to move freely.**

5. Push the power cord down through the rigid arm and install the rigid arm end cap using the set screw provided.
6. Install the power plug on the end of the power cord.

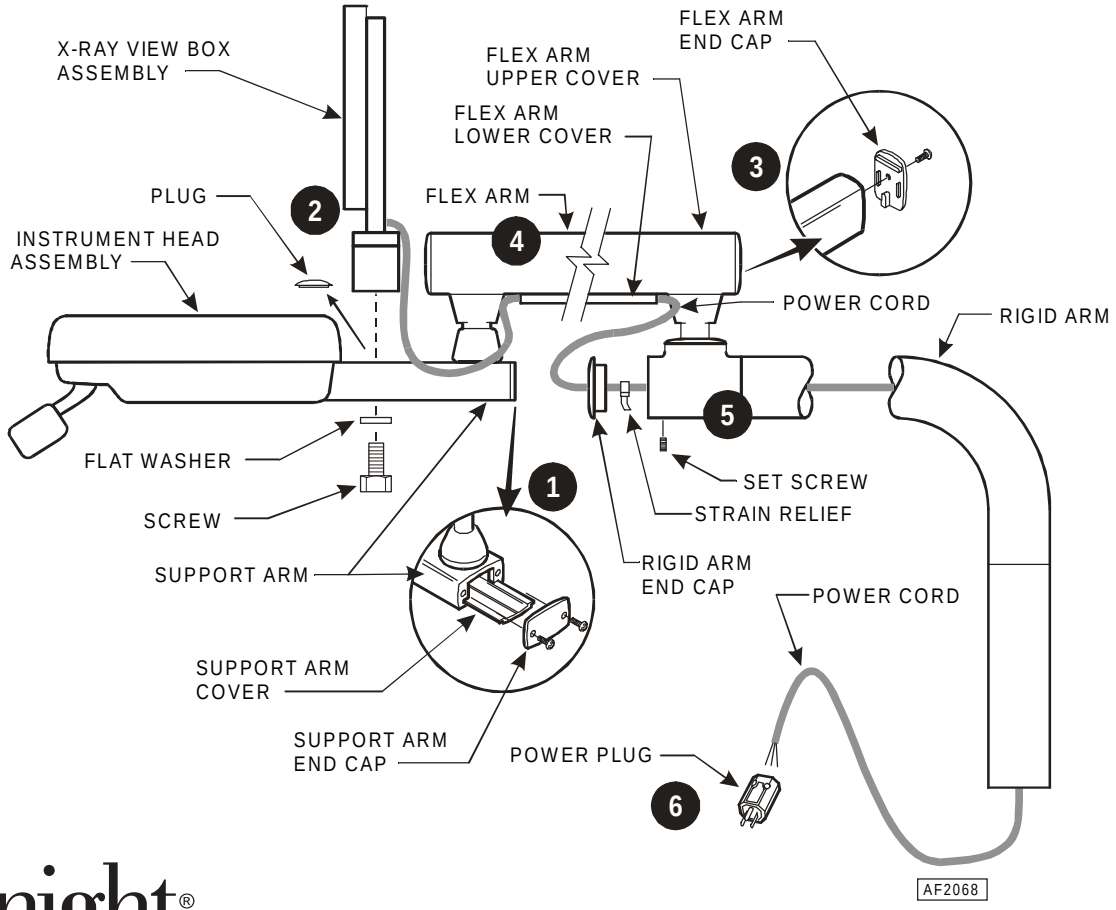

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542